

QUICK START GUIDE


Wireless gamepad for tablets
MODECOM Volcano FLAME



Please read before use

Before you start to use this product please read carefully the following manual. Please use this product only according to its purpose. If the product will be used by children please train them to make sure that they use it properly.

1. Buttons and functions

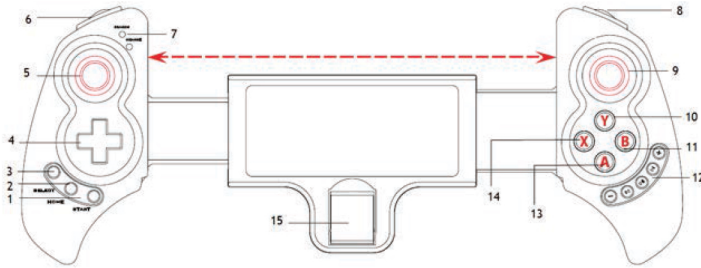

1.	Start button	To start a game (additional functions depending on each game)
2.	Home button	To turn on/ Together with X button – pair
3.	Select button	Options inside a game (additional functions depending on each game)
4.	Direction button	Functions depending on each game
5.	Left joystick	To control the in-game movement
6.	L1/L2 buttons	Functions depending on each game
7.	LED light	To signal BT connection / battery indicator
8.	R1/R2 buttons	Functions depending on each game
9.	Right joystick	To control the in-game movement and mouse
10.	Y button	Functions depending on each game
11.	B button	Functions depending on each game
12.	Multimedia buttons	To control playing files and volume
13.	A button	Functions depending on each game
14.	X button	Functions depending on each game
15.	Tablet stand	To put the bottom edge of tablet

2. Setting up

2.1 Charging

The built-in battery is an integral part of the device. Do not try to replace it or remove it. To charge the battery please connect the device to PC USB port or USB adapter via USB cable. Please note that the power adapter must be 5V 500mA (0,5A). Full charging cycle should be completed in 180 minutes. When done, please remove the USB cable.

2.2 Turn on / off

2.2.1 Turn on

The product is meant for playing games which support external Bluetooth controllers. Please make sure the game you want to play supports gamepads. Please remember that you might need to select gamepad control in game settings and/or to assign specific buttons for specific game functions.

First time turn on – it will be required to pair the gamepad with smartphone. To turn on the product please press and hold X key (14) and press HOME (2) at the same time to turn on and enter pairing mode.

Every other time turn on – it is not required to use pair mode. To turn on the product please press HOME (2) button.

2.2.2 Turn off

To turn off please press and hold HOME key for 5 sec. The product will turn off automatically after 3 minutes if wireless connection is not established.

2.3 Connecting to Android device

First time turn on – it will be required to pair the gamepad with smartphone. To turn on the product and connect please press and hold X key (14) and press HOME (2) at the same time to enter pairing mode. In pairing mode the LED will blink quickly. Then turn on Bluetooth in your Android device Settings menu. Start scanning for Bluetooth devices nearby. Select the gamepad to pair. Connection will be established automatically. After pairing the LED will light continuously.

Every other time turn on – it is not required to use pair mode. Gamepad and smartphone will connect automatically when gamepad will be turned on and smartphone's Bluetooth module will be on. Please press HOME (2) button to turn on. Then turn on Bluetooth in your smartphone Settings. Then devices will connect automatically. After connecting the LED will light continuously. Please note that the gamepad must not be deleted from saved devices list in Bluetooth settings.

After pairing its possible to turn on the Mouse mode. Press and hold Y button and HOME (2) buttons at the same time to activate. You can move around the mouse cursor using the right joystick and use L1(LB) to confirm your selection and R1(RB) to return. To cancel Mouse mode please press and hold X (14) key and press HOME (2) at the same time.

2.4 Connecting to Windows PC

To connect first power on and turn on the gamepad. Then turn on Bluetooth in your Windows PC Settings. Start scanning for Bluetooth devices nearby. Select the gamepad to pair. Connection will be established automatically.

2.5 Mounting the tablet in the holder

The gamepad can hold tablets from 6 inch to 10.1 inch LCD size. To mount the tablet properly please retract the telescopic arm to make space for tablet. Left side part can be additionally expanded. Open the stand to get support for the bottom edge of tablet. Push both sides of the gamepad towards the tablet to make sure the tablet is securely and tightly held. Then lock the mechanical switch placed on the back side of the gamepad to prevent accidental arm's opening.

3. Specifications

Bluetooth	3.0
Battery	3.7V 380 mAh
Supported systems	Android 4.4+, Windows 7+
Supported LCD sizes	from 6" to 10.1"
Tablet dimension	min. 128mm, max. 275mm
Range	5-6m
Working time	ok 15h
Power	5V (0,5A) 500mA
Work. Temp.	0-50 °C
Store Temp.	-10-60 °C
Work. Humid.	0-80 %
Store Humid.	0-80 %

4. Troubleshooting

In case you are not able to pair the gamepad with your smartphone or tablet please make sure that:

- the built-in battery is charged
- Bluetooth function is activated in your smartphone / tablet
- the distance between devices is less than 5m

5. Important information

We advise against use of the product for extended periods of time to avoid such symptoms as painful wrists, fingers, arms. If one should experience any discomfort - stop using the product and make sure the symptoms fade away. We advise to consult medical specialists. When using the product you need to take a comfortable position. Make sure that there will not be any accidental contact with objects or people nearby which could cause injury or damage the product and your smartphone. Before you start move around you need to stop using the product to avoid injuries. Please make sure that you place the smartphone in the product's holder arm carefully. Before using the product make sure that the phone is safely mounted. MODECOM is not responsible for any damage caused by improper handling.

ENVIRONMENT PROTECTION:

This symbol on our product nameplates proves its compatibility with the EU Directive 2002/96 concerning proper disposal of waste electric and electronic equipment (WEEE). By using the appropriate disposal systems you prevent the potential negative consequences of wrong product take-back that can pose risks to the environment and human health. The symbol indicates that this product must not be disposed of with your other waste. You must hand it over to a designated collection point for the recycling of electrical and electronic equipment waste. The disposal of the product should obey all the specific Community waste management legislations. Contact your local city office, your waste disposal service or the place of purchase for more information on the collection. Weight of the device: 240g



Declaration of conformity EC Nr 5/JS/2015

Referring to directives 1999/5/WE, 2011/65/EU

MODECOM S.A.

ul. Stoleczna 116A, Stara Iwiczna 05-500 Piaseczno, Polska.

MODECOM S.A. declares under its own responsibility, that product MODECOM Volcano Flame Tablet Gamepad to which this declaration relates is in conformity with the provisions of the following directives:

- RTTE 1999/5/WE
- RoHS 2011/65/EU

and comply with the harmonized standards listed below:

- EN 300 328 V1.8.1 (2012-06)
- EN 301 489-1 V1.9.2 (2011-09)
- EN 301 489-17 V2.2.1 (2012-09)
- EN 50581:2012 (PN-EN 50581:2013-03)

The last two digits of the year in which the CE marking: 15

Warszawa dn. 25.09.2015 r.
(miejscu i data wystawienia)

Jakub Skibiński

(imię, nazwisko i podpis osoby odpowiedzialnej)
Product Manager
(funkcja)

www.modecom.eu

Copyright© 2015. MODECOM S.A. All rights reserved.
MODECOM Logo is a registered trademark of MODECOM S.A.